

## Safety Instructions

**WARNING!** When using electric tools, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following. Read all these instructions before attempting to operate this product and save these instructions.

For safe operation:

1. Keep work area clean. Cluttered areas and benches invite injuries.
2. Consider work area environment. Don't expose power tools to rain. Don't use power tools in damp or wet locations. Keep work area well lit. Don't use power tools in the presence of flammable liquid or gases
3. Guard against electric shock. Prevent body contact with grounded surfaces (e.g. pipes, radiators, ranges, refrigerators.)
4. Keep children away. Do not let visitors contact tools or extension cord. All visitors should be kept away from work area.
5. Store idle tools. When not to use, tool should be stored in dry, high, or locked-up place, out of the reach of children.
6. Don't force tool. It will do the job better and safer at the rate for which it was intended.
7. Use right tool. Don't force small tools or attachments to do the job of a heavy-duty tool. Don't use tools for purposes not intended; for example, don't use circular saw for cutting tree limbs or logs.
8. Dress properly. Do not wear loose clothing or jewelry. They can be caught in moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair.
9. Use safety glasses. Also use face or dust mask if cutting operation is dusty.
10. Don't abuse cord. Never carry tool by cord or yank it to disconnect it from receptacle. Keep cord from heat oil and sharp edges. Requires 120 volt. Disconnect tools when not in use.
11. Secure work. Safety line must be attached before using on roof. It's safer than using your hand and it frees both hands to operate tools.
12. Don't overreach. Keep proper footing and balance at all times.
13. Maintain tools with care. Keep tools sharp and clean for better and safer performance. Follow instructions for lubricating and changing accessories. Inspect tool cords periodically and replace if damaged. Keep handles dry clean, and free from oil and grease.
14. Avoid unintentional starting. Don't carry plugged-in tool with finger on switch. Be sure switch is off when plugging in.
15. Outdoor use extension cords. When tool is used outdoor, use only extension cords intended for use outdoors and so marked.
16. Stay alert. Watch what you are doing. Use common sense. Do not operate tool when you are tired.
17. Check damaged parts. Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in this instruction manual. Have defective switches replaced by an authorized service center. Do not use tool if switch does not turn it on and off.
18. **Warning:** The use of any other accessory or attachment other than recommended in this operating instructions of the AGZ Slate Cutter may present a risk of personal injury.
19. Have your tool repaired by a qualified person. This electric tool is in accordance with the relevant safety rules. Repairs should only be carried out by qualified persons using original spare-parts otherwise this may result in considerable danger to the user.
20. Keep guards in place. Always use eye protection and gloves. Wear ear protectors when using for extended periods.
21. **It is imperative that when setting up to cut with the machine, the cord MUST be placed in a thoughtful manner, so as falling pieces of slate do not contact the cord. The sharp edges of the slate will cause damage to the cord requiring repair.**
22. **DO NOT push the slate excessively hard into the blade to cut faster, as this could result in excessive damage to the motor of the drill over time. Be aware to use a reasonable amount of force into the blade when cutting. Use your good judgment.**
23. **DO NOT allow excess buildup of cut slate to accumulate under the machine. This area should be cleaned out with some frequency when doing excessive cutting, so as not to create an excessively dirty cutting environment. Damage to the drill motor can result over time.**

### Warranty:

The warranty is for a period of 6 months from the date of purchase, which has to be verified by proof of purchase. The warranty covers all defects or damages of product during the warranty period evidently due to defaults in workmanship or material and is limited to repair and/or adjustment. The warranty is not valid if the product has been misused, used contrary to the instruction manual, or being incorrectly connected. For servicing, the product must be sent or presented to NA BOCKER. When sending a product, it should be safely packed, marked with sender's address and if possible, accompanied by a short description of the fault. A warranty repair is free of charge. It does not institute an extension or a new start of the warranty period. Exchanged parts become our property. Delivery charges or postage will have to be paid by the sender. 6 month for Parts, 12 month for Service.